


Freud bolt pattern

FT2000/FT2200 or the FT3000

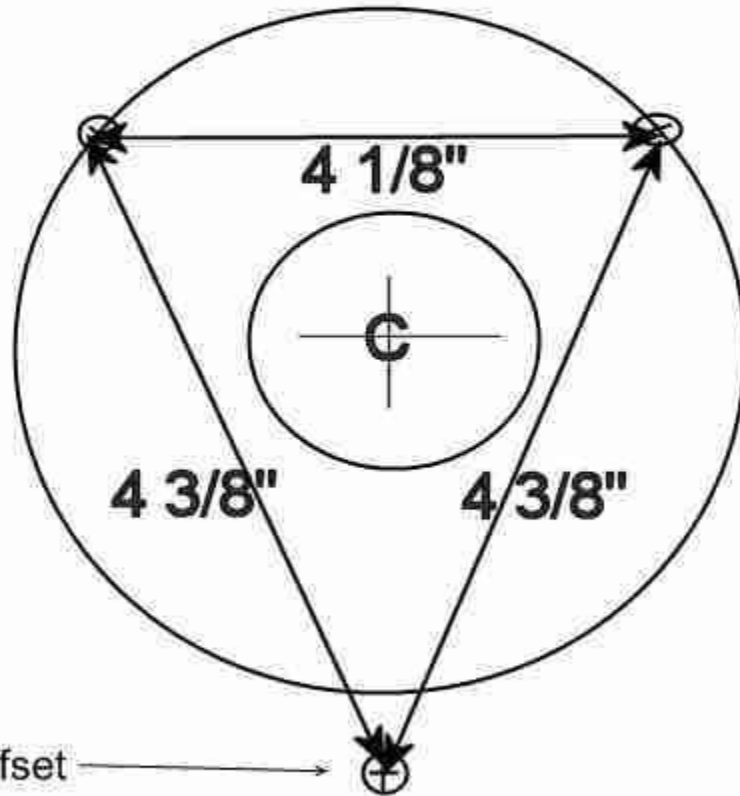

one that's offset